

Emerald Planet Cheat Sheet

Triggered alarms

To find the alarm that is triggered, the alarm will sound with three long chirps while the others will quickly sound 2 chirps for 3 seconds at a time. Moving forward this will also include a red light (flashing) to notify the triggered alarm (upcoming production stock).

Activating the battery powered alarm

- Hold the hush button until the red light appears
- When the light appears, quickly let go and a chirp will sound to notify the alarm is on

Pairing

- Press the hush button 3 times
- A red light will start to flash to mean it is in pairing mode
- Do the same with others and the alarm will chirp to mean successful pairing

Unpairing

- Press the hush button 3 times
- When the red light starts flashing, hold the hush button down until the red light disappears
- The red light will then start flashing and then press the hush button once
- The alarm will start to chirp to mean the alarm is unpaired

Please note, unpairing one alarm does not unpair all the others, even if it is the master

Deactivating the battery powered alarm

- Press the hush button 6 times
- A red light will come on and then start flashing
- When it starts flashing, quickly press the hush button 6 times again
- A chirp will sound to mean the alarm is deactivated